
TELESIN

Rechargeable Selfie Stick


充电自拍杆

User Guide / 使用指南

Product Introduction

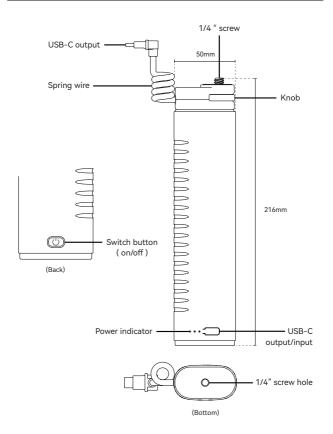

Accessories

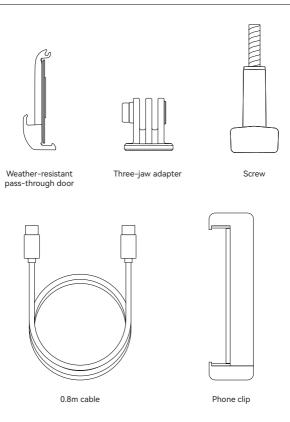


How to use

Installation


This selfie stick is suitable for a wide range of applications, it can be used to mount a GoPro via the 3-jaw adapter, a mobile phone via the phone clip. It can also be used to mount other devices with 1/4 screw holes directly through the top 1/4 screw.

Mount a GoPro

  Attach the 3-jaw adapter and tighten it with the knob.



 Attach the GoPro and replace the camera battery door with the weather-resistant pass through door.




Λ

Warning: IP52 dust and drip-proof design, a little water splashes and snowy scenes are not affected.


Note: a: Splashes need to be wiped away as soon as possible. b: Snow needs to be wiped away before it melts. c: It needs to be used with the weather-resistant pass-through door.

Mount a phone

Please install the phone clip before mounting a phone.

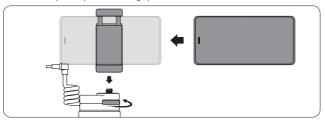

 ■ Mount other devices with their own 1/4" screw holes, e.g. fill-in lights, cameras




Warning: When extended, the max load capacity of the rechargeable selfie stick is 300 g. Use with devices exceeding 300 g is prohibited when extended.

Charge the devices

Charging

Charging port automatically detects device insertion and activates charging without the need for a button.

Note: Fast charging output of up to PD18W is supported when using either USB-C port output; when using both USB-C ports at the same time, both do not support fast charging.

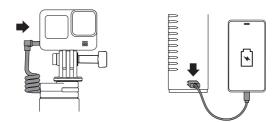


Stop charging

Double click () to stop charging, click () again to wake up charging (Or just unplug the cable to stop charging and plug it back in to charge again)

Charge rechargeable selfie stick

Use the bottom USB-C port to charge the rechargeable selfie stick with the included cable.
*Note: The rechargeable selfie stick supports fast charging input, so it is recommended to use a charger ≥18W.

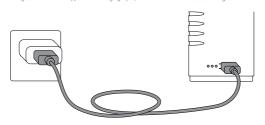

Power display

When charging devices, the indicator shows:

| 0 | on | O fla | ash | ●off | |
|---|----|--------------|-----|------|--|
| | | | | | |
| | | | | | |

| Electricity | Indicator status |
|-------------|------------------|
| ≥66% | 0 0 0 |
| 33%-66% | 0 0 • |
| ≤33% | 0 • • |
| Low Power | • • |
| Power Off | • • • |

■ When charging the selfie stick, the indicator shows: Oon ①flash ●off

| Electricity | Indicator status | | |
|-------------|---------------------------|--|--|
| Full | 0 0 0 | | |
| ≥66% | \circ \circ \bullet | | |
| 33%-66% | \circ \bullet | | |
| ≤33% | • • | | |

Specification

| Shrink Length | 216mm | Maximum Length | 900mm |
|-----------------------|--|----------------------|---------------------|
| Net Product Weight | 400g | Gross Product Weight | 580g |
| Battery Capacity | 10000mAh | Rated Capacity | 5000mAh, 3.6V, 36Wh |
| Input | 5V/3A, 9V/2A, 12V/1.5A | | |
| Output | 5V/3A, 9V/2A, 12V/1.5A | | |
| Protocol Support | QC3.0 / PD3.0 / FPC / AFC / APPLE2.4A MAX18W | | |
| Charging Temperature | 0~45°C | | |
| Discharge Temperature | -10°C~50°C | | |
| Charging Time | About 3h (Measured with a charger ≥18W connected) | | |
| Duration Time | GoPro lasts around 6.5 hours in 5.3k/30 fps mode (This data was measured by TELESIN's official lab, actual usage may vary slightly due to the loss of the built-in charging cable) | | |


Cautions

- Do not charge the rechargeable selfie stick in an environment below 0°C or above 45°C.
- 2. Do not place it in a wet place for a long time, do not squeeze it or drop it.
- 3. IP52 dust-proof and drip-proof design, a small amount of splashing water and snowy scenes are not affected. Note: a: Splashes of water need to be wiped away as soon as possible. b: Snow needs to be wiped away before it melts.c: It need to be used with a weather-resistant pass through door.
- 4. No fast charging on both outputs when charging two devices at the same time.
- The rechargeable selfie stick does not support simultaneous charging and discharging. It is prohibited to charge an external device while charging the rechargeable selfie stick.


Disclaimer

Please read this statement carefully and by using this product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this product. You undertake to use this product only for legitimate and lawful purposes. You understand and agree that ("Telesin") shall not be liable for any misuse, adverse effects, damages, injuries, penalties or other legal consequences arising directly or indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent Telesin reserves the right to interpret and modify this commitment within the limits of national laws and regulations.

产品介绍

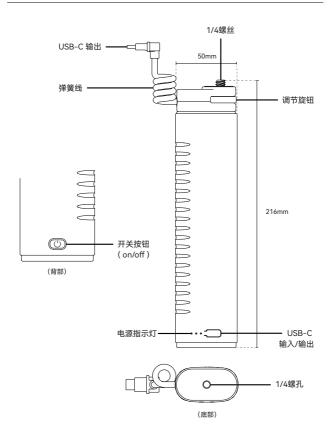

配件介绍

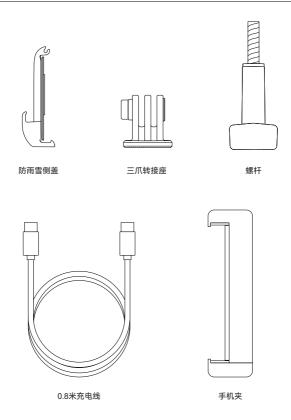


使用方法

安装

本自拍杆适用范围广、可通过三爪转接座来安装GoPro,也可通过手机夹来安装手机,还 可直接通过顶部1/4螺丝来安装其他带有1/4螺孔的设备。

■安装Gopro

1. 安装三爪转接座, 并通过调节旋钮旋紧

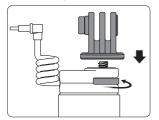

2. 安装gopro, 并将相机侧盖更换为随赠的防雨雪侧盖




警告: IP52 防尘防滴水设计, 少量溅水以及雪天场景不收影响;


警告:IP52 防尘防滅水域で、シ里森ハルスニハッホ・ハッ・ハ 注意: a: 溅水需要尽快擦除, b: 积雪融化前需要擦除, c: 需要搭配防雨雪侧盖使用。

■安装手机

安装手机 (须先安装手机夹)

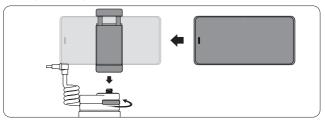

■安装其他自带1/4螺孔的设备,如补光灯、相机

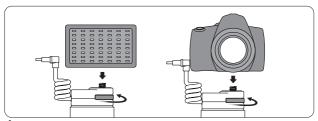


▲ 警告: 充电自拍杆伸长状态下的最大承重为 300g,在安装超过 300g 的设备时禁止在伸长状态下使用。

给设备充电

■充电

充电口可自动检测设备插入, 无需按键即可激活充电

*注:使用任意一个USB-C口输出时,支持最大18W的快充输出;当同时使用两个USB-C口时,均不支持快充。

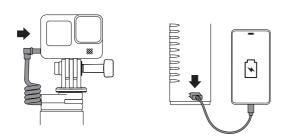


■停止充电

双击(')可关闭充电,再次单击(')可以唤醒充电(或者直接拔线也可停止充电,再插入即可再充电)。

给充电自拍杆充电

使用底部USB-C口, 连接随赠充电线给充电自拍杆充电

*注: 充电自拍杆支持快充输入, 所以建议使用大于等于18W的充电器

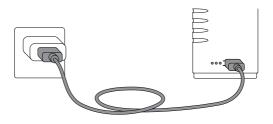

电量显示

■为设备充电时,指示灯显示电量如下:

○亮 ①闪烁 ●灭

| 电量 | 指示灯状态 |
|---------|-----------------------------|
| ≥66% | 0 0 0 |
| 33%-66% | 0 0 • |
| ≤33% | \circ \bullet \bullet |
| 电量低 | 0 • • |
| 关机 | • • • |

■为充电自拍杆充电时,指示灯显示电量如下:

○亮 ①闪烁 ●灭

| 电量 | 指示灯状态 | | |
|---------|---------------------------|--|--|
| 充满 | 0 0 0 | | |
| ≥66% | \circ \circ \bullet | | |
| 33%-66% | \circ \bullet | | |
| ≤33% | 0 • • | | |

规格参数

| 收缩长度 | 216mm | 最大伸长长度 | 900mm |
|--------|---|--------|---------------------|
| 产品净重 | 400g | 产品毛重 | 540g |
| 电池容量 | 10000mAh | 额定容量 | 5000mAh, 3.6V, 36Wh |
| 电源输入 | 5V/3A, 9V/2A, 12V/1.5A | | |
| 电源输出 | 5V/3A, 9V/2A, 12V/1.5A | | |
| 支持快充协议 | QC3.0 / PD3.0 / FPC / AFC / APPLE2.4A MAX18W | | |
| 充电环境温度 | 0~45℃ | | |
| 放电环境温度 | -10°C~50°C | | |
| 充电时长 | 3小时左右 (在连接大于等于18W的充电器下测得) | | |
| 续航时长 | Gopro在5.3k/30帧模式下续航6.5小时左右 (本数据从泰迅官方实验室测得,实际使用时续航时长可能因内置充电线的损耗会略有偏差) | | |

注意事项

- 1. 禁止在低于0℃或高于45℃的环境下给充电自拍杆充电:
- 2. 不要长期放置于潮湿处, 切勿挤压跌落;
- 3. IP52防尘防滴水设计,少量溅水以及雪天场景不受影响; 注意: a: 溅水需要尽快挖除 b: 积雪融化前需要挖除 c: 需要搭配防雨雪侧盖使用:
- 4. 同时充两台设备时, 两个输出口均无快充;
- 5. 充电自拍杆不支持同时充放电,即禁止在给充电自拍杆充电的同时给外接设备充电。

免责声明

请仔细阅读本声明,一旦使用本产品,即视为对本声明的全部认可和接受。每次使用前,请仔细检查产品,若 出现破损、变形,请勿使用。使用本产品,就意味着您认可并同意,您将对使用本产品的行为和可能产生的后 果负全部责任。您承诺仅会出于正当合法的目的使用本产品。您理解并同意,对于直接或间接因使用本产品 而造成的滥用、不利影响、损害、伤害、惩罚或者其他法律后果,泰迅数码有限公司(以下简称"Telesin")将 不承担任何责任。用户应遵循包括但不限于本文提及的使用注意事项。在国家法律法规范围内,本承诺解释 权、修改权识 Telesin 所有。

